PM Page 2

MAX-DA79

# DVD MINI COMPONENT SYSTEM WITH USB HOST

## DVD/CD/MP3-CD/CD-R/RW PLAYBACK

## user manual

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/global/register

SAMSUNG

AH68-02106Y

Downloaded From Disc-Player.com Samsung Manuals

# arnings

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

**CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.**

This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.

This symbol alerts you to important operating and maintenance instructions accompanying the unit.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

n)

220V SASO APPROVED PLUG.THE CUSTOMER IS VED 127V PLUG FROM THE LOCAL DEALER.

AC outlet with a protective grounding connection.
he plug must be pulled out from the mains socket, therefore the mains

splashing and no objects filled with liquids,such as vases,shall be

hall stay readily operable at any time.

# Precautions



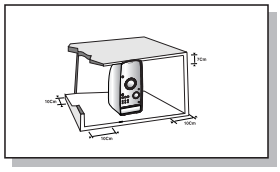

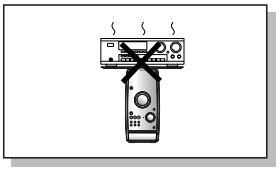

Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc tray is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

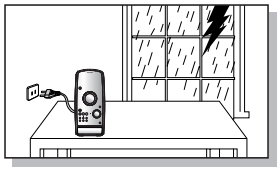

During thunderstorms, disconnect AC main plug from the wall outlet.
Voltage peaks due to lightning could damage the unit.

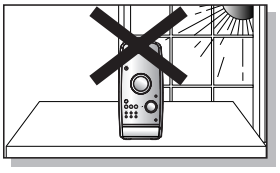

Do not expose the unit to direct sunlight or other heat sources.
This could lead to overheating and malfunction of the unit.

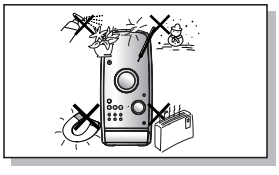

Protect the player from moisture(i.e. vases) , and excess heat(e.g.fireplace) or equipment creating strong magnetic or electric fields (i.e.speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use.
Use of this product is for personal use only.
Condensation may occur if your player or disc have been stored in cold temperatures.
If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

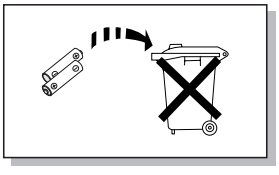

The battery used with this product contain chemicals that are harmful to the environment.
Do not dispose of batteries in the general household trash.



Downloaded From Disc-Player.com Samsung Manuals

# Contents

ENG

PREPARATION


**PREPARATION**
Safety Warnings ..... 1
Precautions ..... 2
Features ..... 3
Notes on Discs ..... 5
Description ..... 7

**CONNECTIONS**
Connecting the Speakers ..... 11
Connecting the video Out to your TV ..... 13
HDMI Function ..... 14
Connecting External Components ..... 15
Connecting the FM Antennas ..... 16
Setting the Clock ..... 17

**OPERATION**
Disc Playback ..... 18
MP3/WMA-CD Playback ..... 19
JPEG File Playback ..... 20
DivX Playback ..... 21
Playing Media Files using the USB feature ..... 23
Using Bluetooth(Option) ..... 25
Displaying Disc Information ..... 27
Fast/Slow Playback ..... 28
Skipping Scenes/Songs ..... 29
Angle Function ..... 30
Repeat Playback ..... 31
A-B Repeat playback ..... 33
Zoom Function ..... 34
Selecting Audio Subtitle Language ..... 35
Moving Directly to a Scene/Song ..... 36
Using Disc Menu ..... 37
Using the Title Menu ..... 38

**SETUP**
Setting the Language ..... 39
Language Code List ..... 40
Setting TV Screen type ..... 41
Setting Parental Controls (Rating Level) ..... 43
Setting the Password ..... 44
Setting the Wallpaper ..... 45
Setting the Speaker Mode ..... 47
Setting the Test Tone ..... 48
Setting the Delay Time ..... 49
Setting the Audio Quality ..... 51
Setting the DRC (Dynamic Range Compression) ..... 53
AV SYNC Setup ..... 54
Dolby Pro Logic II Mode ..... 55
Dolby Pro Logic II Effect ..... 56

**RADIO OPERATION**
Listening to Radio ..... 57
Presetting Stations ..... 58

**MISCELLANEOUS**
Timer Function ..... 59
Canceling the Timer ..... 60
POWER SOUND/DSP/EQ Function ..... 61
Sleep Timer Function / Mute Function ..... 62
DEMO Function / DIMMER Function/ECO Function ..... 63
CD Ripping Function ..... 64
Connecting Headphones/Microphone ..... 65
Cautions on Handling and Storing Discs ..... 66
Before Calling for Service ..... 67
Specifications ..... 69
USB Host Feature Supported Products ..... 70
Notes on Terminology ..... 71




Downloaded From Disc-Player.com Samsung Manuals

**Disc)** offers fantastic audio and video, thanks to Dolby Digital G-2 video compression technology. Now you can enjoy these e, as if you were in a movie theater or concert hall.

are coded by region. These regional codes must match in order odes do not match, the disc will not play.
s player is given on the rear panel of the player.
VDs that are labeled with identical region codes.)

| Signals | Disc Size | Max. Playing Time |
|---|---|---|
| eo | 12cm | Approx. 240 min. (single-sided) |
| | | Approx. 480 min. (double-sided) |
| | 8cm | Approx. 80 min. (single-sided) |
| | | Approx. 160 min. (double-sided) |
| lio | 12cm | 74 min. |
| | 8cm | 20 min. |
| Video | 12cm | 74 min. |
| | 8cm | 20 min. |

## pes of disc!

M discs cannot be played on this player.
**SC FORMAT>** message appears on the TV screen.
y on this player.
**THIS DISC PLEASE, CHECK REGION CODE>** message

**otection. Because of this, you should only connect your DVD onnecting to a VCR results in a distorted**

technology that is protected by methods claims of certain U.S. wned by Macrovision Corporation and other rights owners. ust be authorized by Macrovision Corporation, and is intended for ess otherwise authorized by Macrovision Corporation. ited.

## Disc Recording Format

**This product does not support Secure (DRM) Media files.**

### CD-R Discs
- Some CD-R discs may not be playable depending on the disc recording device (CD-Recorder or PC) and the condition of the disc.
- Use a 650MB/74 minute CD-R disc.
  Do not use CD-R discs over 700MB/80 minute as they may not be playback.
- Some CD-RW (Rewritable) media, may not be playable.
- Only CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

### CD-R MP3 Discs
- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the "mp3" and extensions can be played.
- Only a consecutively written multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- A maximum of 500 tracks can be played per CD.
- A maximum of 300 folders can be played per CD.

### CD-R JPEG Discs
- Only files with the "jpg" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.

### DVD±R/RW, CD-R/RW DivX Discs
- Since this product only provides encoding formats authorized by DivX Networks, Inc., a DivX file created by the user might not play.
- Software updates for incompatible formats are not supported.
  (Example : QPEL, GMC, resolution higher than 800 x 600 pixels, etc.)
- Sections with a high frame rate might not be played while playing a DivX file.
- For more information about the formats authorized by DivX Networks, Inc., please visit "www.divxnetworks.net".





Downloaded From Disc-Player.com Samsung Manuals

# on

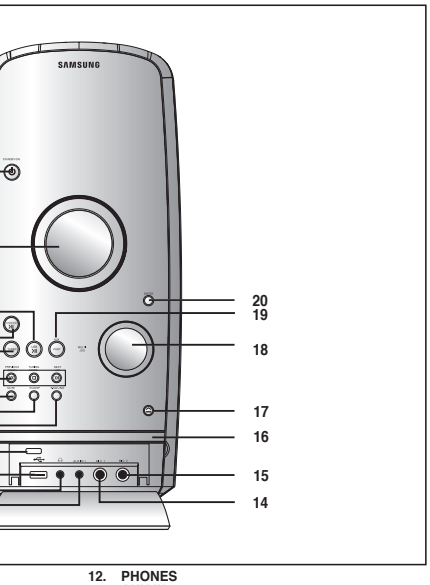


12. PHONES
13. AUX IN 1
14. MIC 1
15. MIC 2
16. DISC TRAY
17. OPEN BUTTON
18. MULTI JOG
19. AUX/PORT
20. ENTER

ING MODE

STATE)

f SKIP BUTTON .
-DOOR by hand in no power state.Do not use this

## —Rear Panel—

**MAX-DA79**

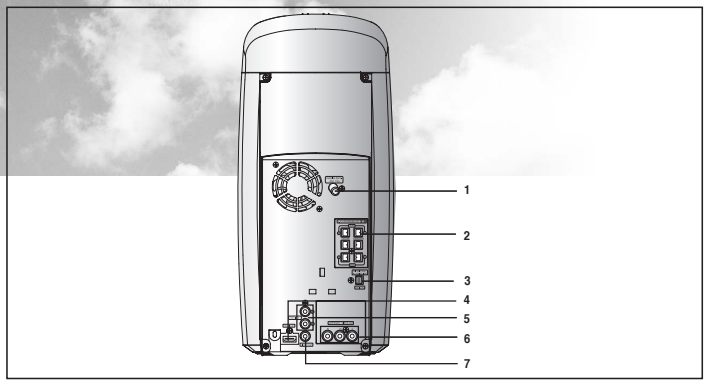


1. **FM Antenna Connector**
2. **5.1 Channel Speaker Output Terminals**
3. **External Digital Optical Input Jack**
4. **HDMI OUT Jack**
5. **AUX IN 2 Jacks**
6. **Component Video Output Connectors**
   Connect a TV with component video input jacks to these jacks.
7. **Video Output Connector**
   Connect the TV's video input jacks (VIDEO IN) to the VIDEO OUT connector.

## Accessories

Remote Control

Video Cable

HDMI Cable

FM Antenna

User's Manual

ENG

PREPARATION



Downloaded From Disc-Player.com Samsung Manuals

# ion



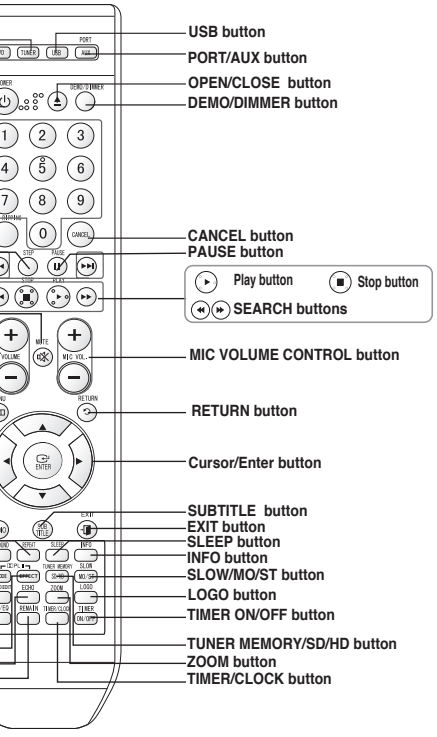


## Insert Remote Batteries

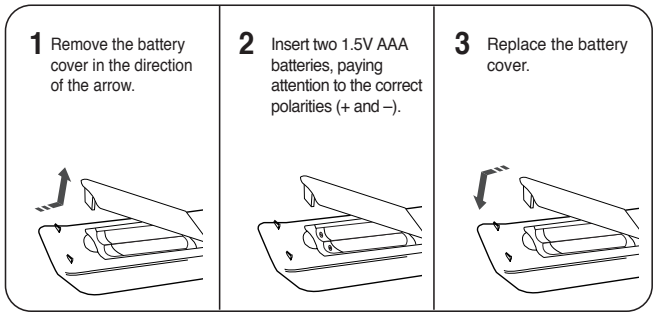
1 Remove the battery cover in the direction of the arrow.
2 Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and –).
3 Replace the battery cover.

**Caution** **Follow these precautions to avoid leaking or cracking cells:**

- Place batteries in the remote control so they match the polarity:(+) to (+)and (–)to (–).
- Use the correct type of batteries.Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

## Range of Operation of the Remote Control

The remote control can be used up to approximately 23 feet/7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

Downloaded From Disc-Player.com Samsung Manuals

# ting the Speakers

product, be sure to turn off the power and disconnect the power cord.

**jacks (2) to the back of mini-component system.**

nd -) are correct.

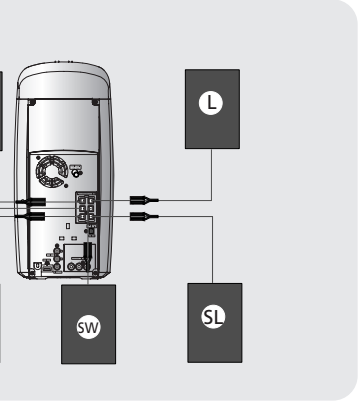


stand.

on, facing

he same

nt face of
he center

speakers.
d you
TV.

### Selecting the Listening Position

The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV.

Example : For 32" TVs 2~2.4m (6~8feet)
For 55" TVs 3.5~4m (11~13feet)

### Rear Speakers SL SR

- Place these speakers behind your listening position.
- If there isn't enough room, place these speakers so they face each other.
- Place them about 60 to 90cm (2 to 3feet) above your ear, facing slightly downward.

★ Unlike the front and center speakers, the rear speakers are used to handle mainly sound effects and sound will not come from them all the time.

★ **Sound will be heard from the rear speakers in DVD 5.1-CH or Dolby Pro Logic II mode only.**

### Subwoofer SW

- The position of the subwoofer is not so critical. Place it anywhere you like.

## Directions in Installing Speaker

- Installation in a place near heating apparatus, under direct lay of light or with high humidity may cause performance degradation of the speaker.
- Do not install on the wall or on a high place of pole or other unstable place to prevent any safety accident caused by falling of the speaker.
- Do not take the speaker near from TV or computer monitor.
  The speaker near the TV or computer monitor may influence the quality of the screen display.

**Caution**

- Do not let children play with or near the speakers. They could get hurt if a speaker falls.
- Keep the speaker out of reach of children so as to prevent children from inserting their hands or alien substances into the duct (hole) of the subwoofer speaker.
- Do not hang the subwoofer on the wall through the duct (hole).

**Note**

- If you place a speaker near your TV set, screen color may be distorted because of the magnetic field generated by the speaker. If this occurs, place the speaker away from your TV set.

### Cooling Fan

The cooling fan supplies cool air to the unit to prevent overheating.

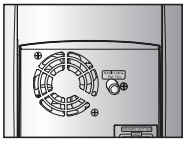

Please observe the following cautions for your safety.

- Make sure the unit is well-ventilated. If the unit has poor ventilation, the temperature inside the unit could rise and may damage it.
- Do not obstruct the cooling fan or ventilation holes. (If the cooling fan or ventilation holes are covered with a newspaper or cloth, heat may build up inside the unit and fire may result.)





Downloaded From Disc-Player.com Samsung Manuals

# ng the Video Out to your TV

*ethods for connecting to a TV.*

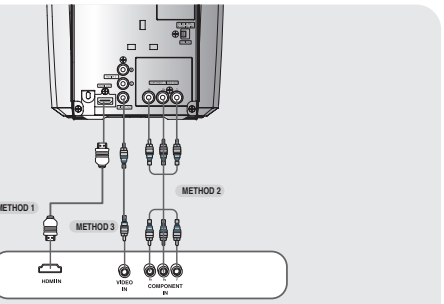


**y)**

UT jack on the back of the DVD Player to the HDMI IN jack on your TV.

**. (Better Quality)**

ent Video inputs, connect a Component video cable(not supplied) from ') jacks on the back of the panel of the main unit to the corresponding

**(Good Quality)**

VIDEO OUT jack on the back of the main unit to the VIDEO IN jack on

terlace scan mode for Component Output.

# HDMI Function

ENG

CONNECTIONS

## Resolution Selection

*This function allows the user to select the screen resolution for HDMI output.*

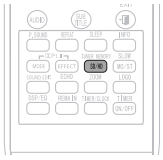

In Stop mode, press and hold the **SD/HD** (Standard Definition/High Definition) button on the remote control.

- Resolutions available for the HDMI output are 576p/480p, 720p, 1080i.
- SD(Standard Definition) resolution is 576p/480p and HD(High Definition) resolution is 720p/1080i.

**Why use HDMI (High Definition Multimedia Interface)?**
This device transmits a DVD video signal digitally without the process of converting to analog. You will get sharper digital pictures when using an HDMI connection.

**Note**

- If the TV does not support the configured resolution, you will not be able to see the picture properly.
- **When an HDMI cable is connected, composite and component video signals are not output.**
- See your TV owner's manual for more information on how to select the TV's Video Input source.

## Setting the HDMI Audio

*The audio signals transmitted over the HDMI Cable can be toggled ON/OFF.*

1 In Stop mode, press the **MENU** button.

2 Press the Cursor ▼ button to move to **<Audio>** and then press the **ENTER** button.

3 Press the Cursor ▼ button to move to **<HDMI AUDIO>** and then press the **ENTER** button.

4 Press the Cursor ▲, ▼ button to select <ON> or <OFF> and then press the **ENTER** button.

- ON : Both video and audio signals are transmitted over the HDMI connection cable, and audio is output through your TV speakers only.
- OFF : Video is transmitted over the HDMI connection cable only, and audio is output through the home theater speakers only.

**Note**

- The default setting of this function is HDMI AUDIO OFF.
- HDMI AUDIO is automatically down-mixed to 2ch for TV speakers.
- P.BASS/CD RIPPING/MIC VOLUME UP/DOWN/ECHO/P.SOUND/EQ/DSP function is not available when HDMI AUDIO is ON.

➢ Press the **RETURN** button to return to the previous level.

➢ Press the **EXIT** button to exit the setup screen.



Downloaded From Disc-Player.com Samsung Manuals

# ng External Components

## log Component

s a VCR, Camcorder, and TV.

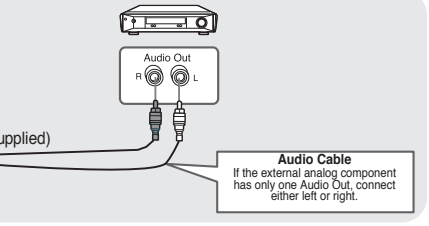


er to Audio Out on the external analog component.

## rnal Analog Component

1 Connect AUX IN 2 (Audio) on the MINI COMPONENT rear panel to the Audio Out of the external analog component.
■ Be sure to match connector colors.

2 Press the **AUX//PORT** button to select <AUX2> input.
The mode switches as follows : **AUX 1 → AUX 2.**

## OPTICAL:Connecting an External Digital Component

Digital signal components such as a Cable Box/Satellite receiver(Set -Top Box).

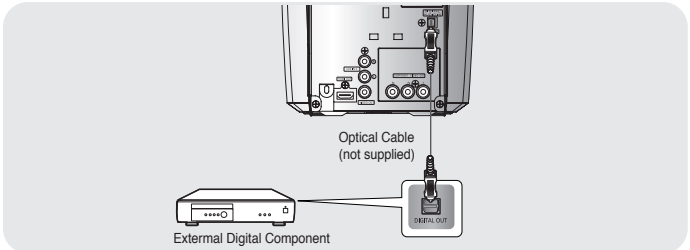


1 Connect the Digital Input(OPTICAL) on the Mini Component to the Digital Output of the external digital component.

2 Press the **AUX/PORT** button to select DIGITAL IN.

# Connecting the FM Antennas

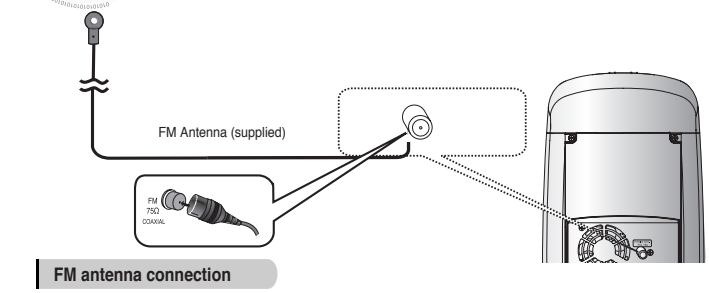


## FM antenna connection

**1. Connect the FM antenna supplied to the FM 75Ω COAXIAL terminal as a temporary measure.**
**2. Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.**

• If reception is poor, connect an outdoor antenna.
Before attaching a 75Ω coaxial cable (with a standard type connector), disconnect the supplied FM antenna.

**Note** • This unit does not receive AM broadcasts.

ENG

CONNECTIONS



Downloaded From Disc-Player.com Samsung Manuals

# ne Clock

conds to set the required options.
start again.

Press **TIMER/CLOCK** twice.

LOCK is displayed.

When the correct time is displayed, press **ENTER**.

TIMER" appears in the display.
he current time is now set.

or ⏮/⏭ button on the panel front
step 3,4.

**3** Press **ENTER**. The hour flashes.

- Increase the hours : ▶
- Decrease the hours : ◀

**Note**

- You can display the time, even when you are using another function, by pressing **TIMER/CLOCK** once.

# emaining Time

me of a title or chapter being played.
**e the REMAIN button is pressed**

MP3

TRACK ELAPSED
TRACK REMAIN
TOTAL ELAPSED
TOTAL REMAIN

TRACK ELAPSED
TRACK REMAIN

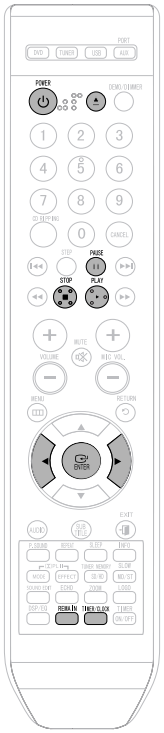

# Disc Playback

ENG

OPERATION

**1** Load a disc.
- Insert a disc that the disc's label facing up.

**2** To open/close the disc tray,press **OPEN/CLOSE** button.

DVD CD
- Playback starts automatically.

MP3 DivX JPEG
- Playback starts automatically.
- If the TV is on, a list of MP3s on the CD will appear on the TV screen.

**Note**
- Depending on the content of the disc, the initial screen may appear different.
- Depending on the recording mode, some MP3-CDs cannot be played.
- Table of contents of a MP3-CD varies depending on the MP3 track format recorded on the disc.

To stop playback, press **STOP** button during playback.
- If pressed once, the stop position will be stored in memory. If **PLAY** ( ▶ ) button or **ENTER** button is pressed, playback resumes from the stop position. (This function works only with DVDs.)
- If pressed twice, "STOP" is displayed, and if **PLAY** ( ▶ ) button is pressed, playback starts from the beginning.

To temporarily pause playback, press **PAUSE** button during playback.
- To resume playback, press **PLAY( ▶ )** button again.



Downloaded From Disc-Player.com Samsung Manuals

# MA-CD Playback

**2** In Stop mode, use ◄ ► ▲ ▼to select the album, and then press the **ENTER** button.

• Use ▲ ▼to select the track.

**4** Press the **STOP** button to stop playback.

some MP3/WMA-CDs may not play.
es depending on the MP3/WMA track

the screen,

en it is in
ed icon from

n.
on.
on.

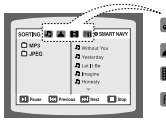

• Music File Icon
• Image File Icon
• Movie File Icon
• All File Icon

# JPEG File Playback JPEG

Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then played back with this DVD player.

ENG

## Rotate/Flip Function

Press Cursor ▲, ▼, ◄, ► buttons during playback.

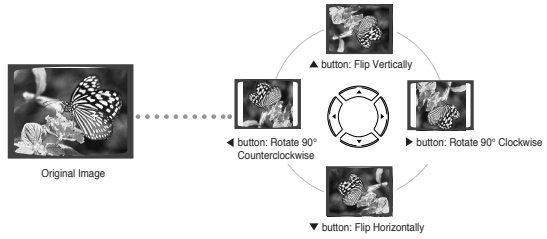
▲ button: Flip Vertically
◄ button: Rotate 90° Counterclockwise
▶ button: Rotate 90° Clockwise
Original Image
▼ button: Flip Horizontally

OPERATION



Downloaded From Disc-Player.com Samsung Manuals

yback

⏭ button.
on, if there are over

button, if there are over

k,

## Subtitle Display

ENG

Press the **SUBTITLE** button.

- Each time you press the button, your selection will toggle between "**SUBTITLE ON**" and "**SUBTITLE OFF**".
- If the disc has only one subtitle file, it will be played automatically.
- Up to 8 subtitle languages are supported.

## Audio Display

Press the **AUDIO** button.

- If there are multiple audio tracks on a disc, you can toggle between them.
- Each time you press the button, your selection will toggle between "**AUDIO**(1/1, 1/2 ...)" and " ".

**Note** • " " is displayed when there is one supported language in the disc.

OPERATION

**DivX Feature Table**

**DivX Supported**
**Avi** files are used to contain the audio and video data; these must be stored on CD in the ISO 9660 format.

| | | SPEC |
|---|---|---|
| VIDEO Compatibility | DivX3.11 | Up to the latest VERSION |
| | WMV | WMV V1/V2/V3/V7 |
| AUDIO Compatibility | MP3 | CBR : 80kbps~384kbps |
| | AC3 | CBR : 128kbps~384kbps |
| | WMA | CBR : 56kbps~128kbps |

**MPEGs containing DivX can be divided into Video and Audio.**

- **Video compatibility** : All versions of DivX later than 3.11 (including the latest 5.1) are supported. In addition, XviD is supported. For WMV, V1, V2, V3, and V7 formats are possible. The initial resolution is 720X480 and may support up to 720X576 .
- **Audio compatibility** : MP3s encoded at bitrates from 80kbps to 384kbps, AC3s from 128kbps to 384kbps, and WMAs from 56kbps to 128kbps are supported.
- **In addition, for subtitles, this unit will support Text format (SMI).**

**Note**

- When playing the DivX disk, you can play the file with extension of AVI only.
- Among the available DivX audio formats, DTS Audio is not supported.
- WMV V8 is not supported for WMV files.
- When burning a subtitle file to a CD-ROM with your PC, be sure to burn it as an SMI file.
- Divx Disc does not playing when its sampling frequency is lower than 32KHz.
- Some of the discs recorded in DivX or XviD depending on the way of recording could be played back not correctly or couldn't be played back at all.
- MP3 file support: MPEG1 LAYER3 (BITRATE : 128KBPS~320KBPS , SAMPLING FREQ.: 32K/44.1K/48KHz) .



Downloaded From Disc-Player.com Samsung Manuals

# lia Files using the USB feature

y files from external USB storage devices such as MP3 players, USB flash memory, B function.

**2** Press the **USB** button to select the USB mode.

- "USB" appears on the display screen and then disappear.
- USB SORTING screen appears on the TV screen and the saved file is played.

**TOP** ( ■ ) button.

are supported.
e USB device, please turn the unit off or nnecting the USB cable.

SB menu screen,

usic File Icon
age File Icon
l File Icon
ovie File Icon
hen it is in stop status and top part of the menu.
n.
n.
n.

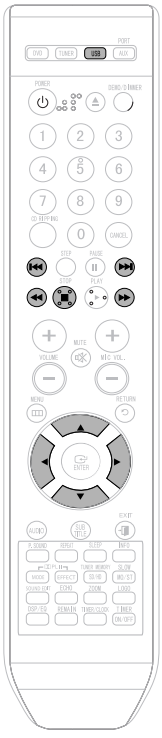

## Skip Forward/Back

During playback, press the ⏮ ⏭ button.

- When there is more than a file, when you press the ⏭ button, the next file is selected.
- When there is more than a file, when you press the ⏮ button, the previous file is selected.

## Fast playback

To playback the disc at a faster speed, press and hold ◀◀ or ▶▶ during playback.

- Each time you press and hold either button, the playback speed will change as follows: 2x → 4x → 8x → 32x → Normal.

### Compatible Devices

1. USB devices that support USB Mass Storage v1.0.
   (USB devices that operate as a removable disk in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: HDD and flash type MP3 player.
3. Digital camera: PTP protocol is not supported.
   - Devices which require additional program installation when you have connected it to a computer, are not supported.
4. USB HDD and USB Flash Drive: Devices that support USB2.0 or USB1.1.
   - You may experience a difference in playback quality when you connect a USB1.1 device.
   - For a USB HDD, make sure to connect an auxiliary power cord to the USB HDD for proper operation.
5. USB card Reader: One slot USB card reader and Multi slot USB card reader
   - Depending on the manufacturer. the USB card reader may not be supported.
   - If you install multiple memory devices into a multi card reader, you may experience problems.

**• Supported Formats**

| | File name | File extension | Bit rate | Version | Pixel | Sampling Frequency |
|---|---|---|---|---|---|---|
| Still Picture | JPG | .JPG .JPEG | – | – | 640*480 | – |
| Music | MP3 | .MP3 | 80~384kbps | – | – | 44.1kHz |
| | WMA | .WMA | 56~128kbps | V8 | – | 44.1kHz |
| Movie | VCD | MPG.MPEG .DAT | 1.5Mbps | VCD1.1,VCD2.0 | 320*480 | 44.1KHz |
| | WMV | WMV | 4Mbps | V1,V2,V3,V7 (V9 is not supported) | 720*480 | 44.1KHz~48KHz |
| | DivX | .AVI,.ASF | 4Mbps | DivX3.11~DivX5.1,Xvid | 720*480 | 44.1KHz~48KHz |

• A device using NTFS file system is not supported.(Only FAT file system is supported.)

The USB host function of this product does not support all USB devices.
For the information on the supported devices,pls see the P70.

ENG

OPERATION



Downloaded From Disc-Player.com Samsung Manuals

# tooth(Option)

you enjoy music with high qualitystereo sound,all without wires!

**bles Bluetooth-compliant devices to easily interconnect connection.**

r malfunction, depending on usage.
with the receiving/transmitting system of the Bluetooth device

ming by the wall, corner or office partitioning.
frequency-band devices including medical equipment,

e Bluetooth device while maintaining a close distance.
Component System and Bluetooth device, the worse the quality.
erational range, the connection is lost.
luetooth connection may not work properly.
ective reception range of up to 10 m in all directions if there are
omatically cut off if the distance is out of this range. Even within
eriorated by obstacles such as walls or doors.

## ent System to a bluetooth device

**the Bluetooth-compliant stereo headset function.**

til the "**BT AUDIO**" appears.
ds and then "**READY**" on the front display

ooth device you
vice's user manual)
Bluetooth device.
s.
m the searched list.
s connected to the
nt System will display
wed by the device name

tion is complete.

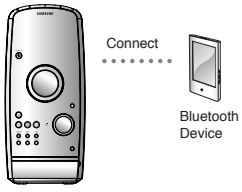


n the connected Bluetooth device over the Mini Component system.

IN code(password) when connecting the Bluetooth device to the home
nput window appears, enter <0000>.
y control play related function only when connected device supports

port some play related function, the Mini Component System can't

y supports Middle Quality SBC data(up to 237kbps@48kHz), and does
a(328kbps@44.1kHz).

## To disconnect the Bluetooth device from the Mini Component System

ENG

You can disconnect the Mini Component System from the Bluetooth device (refer to Bluetooth devices' user manual).

- The Mini Component System will be disconnected.
- When the Mini Component System is disconnected from the Bluetooth device, the Mini Component System will display "**DISCONNECT**" on the front display.

## To disconnect the Mini Component System from the Bluetooth device

Press the **AUX/PORT** button of the Mini Component system to switch from "**BT AUDIO**" to another mode.

- The bluetooth device connected will wait a certain time for response from the Mini Component system When the Mini Component System is disconnected from the before terminating the connection. (Time to disconnection may differ, depending on the bluetooth device)
- The currently connected device will be disconnected.

- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Mini Component System and the Bluetooth device exceeds 10 m. If the distance is returned to the effective range or you restart the Bluetooth device, the Bluetooth connection can be restored.
- With some bluetooth devices, some functions may not work properly.

OPERATION



Downloaded From Disc-Player.com Samsung Manuals

# g Disc Information

on on the disc on the TV screen.

trol .
nges as follows:

MP3 JPEG DivX

Display disappears

Display disappears

**t is a Title?**
ovie contained in a DVD disc.

**t is a Chapter?**
title on a DVD disc is divided into several smaller sections called "chapters".

**appears on the TV screen!**
s symbol appears on the TV screen while buttons are being operated, that ation is not possible with the disc currently being played.

**t is a Track (File)?**
ction of video or a music file recorded on a CD, or MP3-CD.

TRACK (FILE) display
TRACK (FILE) display
REPEAT PLAYBACK display
AUDIO LANGUAGE display
DOLBY DIGITAL display
SUBTITLE display
ANGLE display
LR STEREO (L/R) display
DivX display

# Fast/Slow Playback

ENG

OPERATION

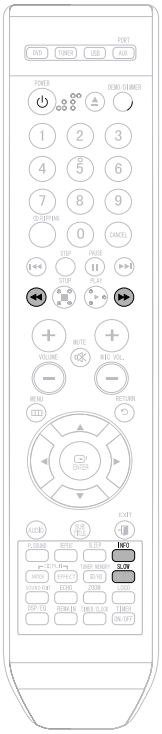

## Fast Playback DVD CD MP3

Press and hold ◀◀ ▶▶ .

- Each time the button is held down during playback, the playback speed changes as follows:

◀◀ 2 X → ◀◀ 4 X → ◀◀ 8 X → ◀◀ 32 X → ► PLAY

▶▶ 2 X → ▶▶ 4 X → ▶▶ 8 X → ▶▶ 32 X → ► PLAY

## Slow Playback

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

DVD: 1/2 → 1/4 → 1/8 → 1/2 → 1/4 → 1/8 → ► PLAY

DivX: 1/2 → 1/4 → 1/8 → ► PLAY

**Note**

- Reverse slow playback does not work with DivX.
- During fast playback of a CD or MP3-CD, sound is heard only at 2x speed, and not at 4x, 8x, and 32x speeds.
- No sound is heard during slow playback and step motion playback.



Downloaded From Disc-Player.com Samsung Manuals

# Scenes/Songs

g playback, the previous or next chapter,

MP3

# ion DVD

time the button is pressed

d step motion playback.

# Angle Function

This function allows you to view the same scene in different angles.

ENG

DVD

**1** Press **INFO** button.

**2** Press Cursor ▶ button to move to ANGLE display.

OPERATION

**3** Press Cursor ▲, ▼ buttons or numeric buttons to select the desired angle.

• Each time the button is pressed, the angle changes as follows:

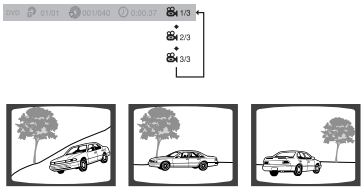


**Note** • The Angle function works only with discs on which multiple angles have been recorded.



Downloaded From Disc-Player.com Samsung Manuals

# Playback



peatedly play a chapter, title, track (song), or directory (MP3 file).

the repeat playback mode changes as follows:

3 JPEG

EAT : RANDOM

EAT : TRACK

EPEAT : DIR

EPEAT : DISC

EPEAT : OFF

**Repeat Playback Options**

**CHAPTER**
Repeatedly plays the selected chapter.

**TITLE**
Repeatedly plays the selected title.

**RANDOM**
Plays tracks in random order.
(A track that has already been played may be played again.)

**TRACK**
Repeatedly plays the selected track.

**DIR**
Repeatedly plays all tracks in the selected folder.

**DISC**
Repeatedly plays the entire disc.

**OFF**
Cancels Repeat Playback.

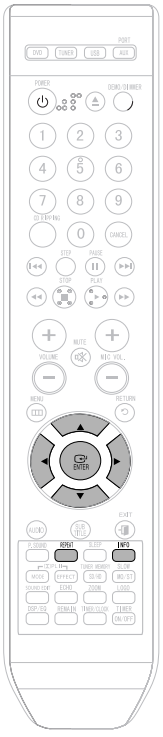

DVD CD

## To Select a Repeat Playback Mode in the Disc Information Screen

**1** Press **INFO** button twice .

•For a CD,Press INFO button once.

DVD EN 1/3 OFF/ 02 OFF

**2** Press Cursor ▶ button to move to REPEAT PLAYBACK display.

DVD EN 1/3 OFF/ 02 OFF

**3** Press Cursor ▼ button to select the desired Repeat Playback mode.

DVD

DVD EN 1/3 OFF/ 02 OFF
A-B
CHAP
TITLE

CD

OFF
A-B
TRACK
DISC

**4** Press **ENTER** button.

**Note**

• For MP3 and JPEG discs, you cannot select Repeat Play from the information display screen.





Downloaded From Disc-Player.com Samsung Manuals

# peat Playback

e REPEAT PLAYBACK ( ) display.

<A-> and then press the **ENTER**
gment.
d position will be stored in memory.

e desired segment.

Cursor ▲ , ▼ button to select

n DivX, MP3 or JPEG discs.

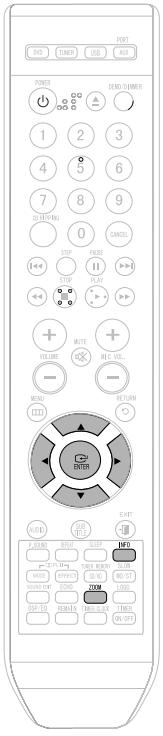

# Zoom Function

This function allows you to enlarge a particular area of the displayed image.

## Zoom (Screen Enlarge) Function DVD

**1** Press **ZOOM** button.

**2** Press Cursor ▲, ▼, ◀, ▶ buttons to move to the area you want to enlarge.

**3** Press **ENTER** button.

• Each time the button is pressed, the zoom level changes as follows:

ZOOM X 1.5 → ZOOM X 2 → ZOOM X 3 → ZOOM OFF → ZOOM X 1.5

• The Zoom function does not operate with DivX discs.

# Before Reading the User's Manual

*Make sure to check the following terms before reading the user manual.*

## Icons that will be used in manual

| Icon | Term | Definition |
|---|---|---|
| DVD | DVD | This involves a function available with DVD or DVD-R/DVD-RW discs that have been recorded and finalized in Video Mode. |
| CD | CD | This involves a function available with a data CD (CD-R or CD-RW). |
| MP3 | MP3 | This involves a function available with CD-R/-RW discs. |
| JPEG | JPEG | This involves a function available with CD-R/-RW discs. |
| DivX | DivX | This involves a function available with MPEG4 discs. (DVD±R/RW, CD-R or CD-RW) |
| ! | CAUTION | This involves a case where a function does not operate or settings may be cancelled. |
| | NOTE | This involves tips or instructions on the page that help each function operate. |

**• In this manual, the instructions marked with "DVD ( DVD )" are applicable to DVD-VIDEO, DVD-AUDIO and DVD-R/-RW discs that have been recorded in Video Mode and then finalized. Where a particular DVD type is mentioned, it is indicated separately.**

• If a DVD-R/-RW disc has not been recorded properly in DVD Video format, it will not be playable.





Downloaded From Disc-Player.com Samsung Manuals

# udio Subtitle Language

## Function DVD

ress Cursor ▲, ▼
uttons or numeric
uttons to select the
esired audio language.

ling on the number of languages on a
sc, a different audio language (ENGLISH,
JAPANESE, etc.) is selected each time
on is pressed.

EN 1/3 ... OFF/ 02 ... OFF
SP 2/3
FR 3/3

## on Function DVD

ess Cursor ▶
tton to move to
UBTITLE display.

1/3 ... OFF/ 02 ... OFF

se the SUBTITLE button on the
ntrol to select a subtitle

g on the disc, the Subtitle and
guage functions may not work.

# Moving Directly to a Scene/Song

ENG

OPERATION

DVD CD

### Moving to a Title/Track

**1** Press **INFO** button.

DVD 01/05 001/040 0:00:37 1/1

**2** Press Cursor ▲, ▼ buttons or numeric buttons to select the desired title/track and then press **ENTER** button.

DVD 03/05 001/002 0:00:01 1/1

### Moving to a Chapter

**3** Press Cursor ◀, ▶ buttons to move to Chapter display.

DVD 01/05 001/040 0:00:01 1/1

### Moving to a Chapter

**4** Press Cursor ▲, ▼ buttons or numeric buttons to select the desired chapter and then press **ENTER** button.

DVD 01/05 025/040 0:00:01 1/1

### Moving to a Specific Time

**5** Press Cursor ◀, ▶ buttons to move to time display.

DVD 01/05 025/040 1:17:30 1/1

### Moving to a Specific Time

**6** Press the numeric buttons to select the desired time and then press **ENTER** button.

DVD 01/05 028/040 1:30:00 1/1

MP3 JPEG

Press the **numeric** buttons.

- The selected file will be played.
- A MP3 or JPEG disc cannot be moved from the disc information screen.
- When playing a MP3 or JEPG disc, you cannot use ▲, ▼ to move a folder. To move a folder, press ■ (Stop) and then press ▲, ▼ .

**Note**

- You can press ⏮ ⏭ on the remote control to move directly to the desired title, chapter, or track.
- Depending on the disc, you may not be able to move to the selected title or time.



Downloaded From Disc-Player.com Samsung Manuals

# sc Menu

dio language, subtitle language, profile, etc.
sc to disc.

Press Cursor ▲, ▼buttons to move to 'DISC MENU' and then press **ENTER** button.

en you select the disc menu that is not ported by the disc, the "**This menu is not pported**" message appears on the screen.

Press **ENTER** button.

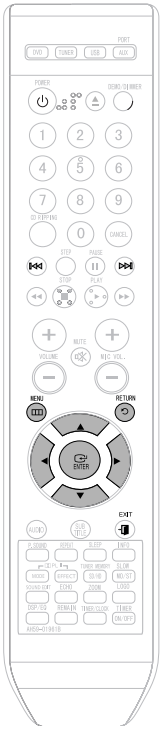

# Using the Title Menu

ENG

For DVDs containing multiple titles, you can view the title of each movie.
Depending on the disc, this function may either not work at all or may work differently.

DVD

**1** In stop mode Press **MENU** button.

**2** Press Cursor ▲, ▼ button to move to 'Title Menu'.

**3** Press **ENTER** button.

• The title menu appears.

Press **RETURN** button to return to the previous level.

Press **MENU/EXIT** button to exit the setup screen.

OPERATION



Downloaded From Disc-Player.com Samsung Manuals

# e Language

default.

ess Cursor ▼
tton to move to
tup' and then
ss **ENTER** button.

ss Cursor ▲,▼
on to select the
ired language and then
ss **ENTER** button.

etup is complete, if the language was
ish, OSD will be displayed in English.

**3** Press **ENTER** button.

**Note**

- To select other language, select OTHER and enter the language code of your country.
  (See 40 page for language code of countries)
  AUDIO, SUB TITLE and DISC MENU language can be selected.

Selecting the Subtitle Language (recorded on the disc)

**Selecting the Disc Menu Language (recorded on the disc)**

* If the language you selected is not recorded on the disc, menu language will not change even if you set it to your desired language.

isc)

to exit the setup screen.

on to return to the previous level.

# Language Code List

ENG

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 39).

| Code | Language | Code | Language | Code | Language | Code | Language |
|---|---|---|---|---|---|---|---|
| 1027 | Afar | 1181 | Frisian | 1334 | Latvian, Lettish | 1506 | Slovenian |
| 1028 | Abkhazian | 1183 | Irish | 1345 | Malagasy | 1507 | Samoan |
| 1032 | Afrikaans | 1186 | Scots Gaelic | 1347 | Maori | 1508 | Shona |
| 1039 | Amharic | 1194 | Galician | 1349 | Macedonian | 1509 | Somali |
| 1044 | Arabic | 1196 | Guarani | 1350 | Malayalam | 1511 | Albanian |
| 1045 | Assamese | 1203 | Gujarati | 1352 | Mongolian | 1512 | Serbian |
| 1051 | Aymara | 1209 | Hausa | 1353 | Moldavian | 1513 | Siswati |
| 1052 | Azerbaijani | 1217 | Hindi | 1356 | Marathi | 1514 | Sesotho |
| 1053 | Bashkir | 1226 | Croatian | 1357 | Malay | 1515 | Sundanese |
| 1057 | Byelorussian | 1229 | Hungarian | 1358 | Maltese | 1516 | Swedish |
| 1059 | Bulgarian | 1233 | Armenian | 1363 | Burmese | 1517 | Swahili |
| 1060 | Bihari | 1235 | Interlingua | 1365 | Nauru | 1521 | Tamil |
| 1069 | Bislama | 1239 | Interlingue | 1369 | Nepali | 1525 | Tegulu |
| 1066 | Bengali; Bangla | 1245 | Inupiak | 1376 | Dutch | 1527 | Tajik |
| 1067 | Tibetan | 1248 | Indonesian | 1379 | Norwegian | 1528 | Thai |
| 1070 | Breton | 1253 | Icelandic | 1393 | Occitan | 1529 | Tigrinya |
| 1079 | Catalan | 1254 | Italian | 1403 | (Afan) Oromo | 1531 | Turkmen |
| 1093 | Corsican | 1257 | Hebrew | 1408 | Oriya | 1532 | Tagalog |
| 1097 | Czech | 1261 | Japanese | 1417 | Punjabi | 1534 | Setswana |
| 1103 | Welsh | 1269 | Yiddish | 1428 | Polish | 1535 | Tonga |
| 1105 | Danish | 1283 | Javanese | 1435 | Pashto, Pushto | 1538 | Turkish |
| 1109 | German | 1287 | Georgian | 1436 | Portuguese | 1539 | Tsonga |
| 1130 | Bhutani | 1297 | Kazakh | 1463 | Quechua | 1540 | Tatar |
| 1142 | Greek | 1298 | Greenlandic | 1481 | Rhaeto-Romance | 1543 | Twi |
| 1144 | English | 1299 | Cambodian | 1482 | Kirundi | 1557 | Ukrainian |
| 1145 | Esperanto | 1300 | Kannada | 1483 | Romanian | 1564 | Urdu |
| 1149 | Spanish | 1301 | Korean | 1489 | Russian | 1572 | Uzbek |
| 1150 | Estonian | 1305 | Kashmiri | 1491 | Kinyarwanda | 1581 | Vietnamese |
| 1151 | Basque | 1307 | Kurdish | 1495 | Sanskrit | 1587 | Volapuk |
| 1157 | Persian | 1311 | Kirghiz | 1498 | Sindhi | 1613 | Wolof |
| 1165 | Finnish | 1313 | Latin | 1501 | Sangro | 1632 | Xhosa |
| 1166 | Fiji | 1326 | Lingala | 1502 | Serbo-Croatian | 1665 | Yoruba |
| 1171 | Faeroese | 1327 | Laothian | 1503 | Singhalese | 1684 | Chinese |
| 1174 | French | 1332 | Lithuanian | 1505 | Slovak | 1697 | Zulu |

SETUP



Downloaded From Disc-Player.com Samsung Manuals

# Screen type

ENG

**1** In stop mode,Press **MENU** button.

**2** Press Cursor ▼ button to move to 'Setup' and then press **ENTER** button.

**3** Press Cursor ▼ button to move to 'TV DISPLAY' and then press **ENTER** button.

**4** Press Cursor ▲,▼ button to select the desired item and then press **ENTER** button.

- Once the setup is complete, you will be taken to the previous screen.

**Adjusting the TV Aspect Ratio (Screen Size)**

*The horizontal to vertical screen size ratio of conventional TVs is 4:3, while that of widescreen and high definition TVs is 16:9. This ratio is called the aspect ratio. When playing DVDs recorded in different screen sizes, you should adjust the aspect ratio to fit your TV or monitor.*

For a standard TV, select either <4:3PS> or <4:3LB> option according to personal preference. Select <WIDE/HDTV> if you have a widescreen TV.

**4:3PS (4:3 Pan&Scan)**
Select this to play a 16:9 picture in the pan & scan mode on a conventional TV.
▪ You can see the central portion of the screen only (with the sides of the 16:9 picture cut off).

**4:3LB (4:3 Letterbox)**
Select this to play a 16:9 picture in the letter box mode on a conventional TV.
▪ Black bars will appear at the top and bottom of the screen.

**WIDE/HDTV**
Select this to view a 16:9 picture in the full-screen mode on your widescreen TV.
▪ You can enjoy the widescreen aspect.

- If a DVD is in the 4:3 ratio, you cannot view it in widescreen.
- Since DVD discs are recorded in various image formats, they will look different depending on the software, the type of TV, and the TV aspect ratio setting.
- When using HDMI, the screen is automatically converted to Wide mode.

SETUP

**RETURN** button to return to the previous level.

s **MENU/EXIT** button to exit the setup screen.



Downloaded From Disc-Player.com Samsung Manuals

# tal Controls (Rating Level)

adult or violent DVDs you do not want children to view.

Press Cursor ▼ button to move to 'Setup' and then press **ENTER** button.

**3** Press Cursor ▼ button to move to 'PARENTAL' and then press **ENTER** button.

Enter the password and then press **ENTER** button.

e password is set to "7890" by default.
ce the setup is complete, you will be
en to the previous screen.

**Note**

- This function works only if a DVD disc contains the rating level information.

**RETURN** button to return to the previous level.

**MENU/EXIT** button to exit the setup screen.

# Setting the Password

ENG

You can set the password for the Parental (rating level) setting.

**1** Press **MENU** button.

**2** Press Cursor ▼ button to move to 'Setup' and then press **ENTER** button.

**3** Press Cursor ▼ button to move to 'PASSWORD' and then press **ENTER** button.

**4** Press **ENTER** button.

**5** Enter the password and then press **ENTER** button.

- Enter the old password, a new password, and confirm new password.
- The setting is complete.

• The password is set to "7890" by default.

Press **RETURN** button to return to the previous level.

Press **CANCEL** button to cancel the error numeric when you inputting password.

Press **MENU/EXIT** button to exit the setup screen.

SETUP



Downloaded From Disc-Player.com Samsung Manuals

# e Wallpaper JPEG DVD



CD, you can set the image you like as a wallpaper.

r

2 Press **LOGO** button.

"**COPY LOGO DATA**" will be displayed on the TV screen.

displayed.
o set up to

on
display

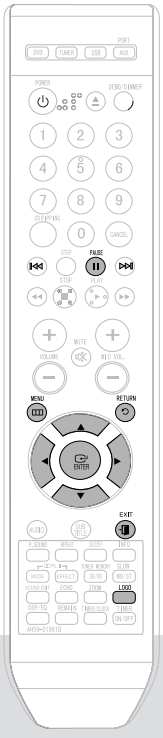

Select this to set the desired image as your wallpaper.

## To Change the Wallpaper

**1** Press **MENU** button.

**2** Press Cursor ▼ button to move to 'Setup' and then press **ENTER** button.

**3** Press Cursor ▼ button to move to 'LOGO' and then press **ENTER** button.

**4** Press ▼ to select the desired 'USER', and then press **ENTER**.

**5** Press **EXIT** button to exit the setup screen.

Press **RETURN** button to return to the previous level.

Press **MENU/EXIT** button to exit the setup screen.





Downloaded From Disc-Player.com Samsung Manuals

# the Speaker Mode

y responses from the speakers will automatically be adjusted
onfiguration and whether certain speakers are used or not.

**2** Press Cursor ▼ button to move to 'Audio' and then press **ENTER** button.

**4** Press Cursor ▲, ▼, ◀, ▶ buttons to move to the desired speaker and then press **ENTER** button.

For C,SL, and SR, each time the button is pressed, the mode switches alternately as follows: SMALL → NONE. For L and R, the mode is set to SMALL.

talled.

h Center CH can toggle between SMALL and NONE,it is not relevant to r settings be signals are distributed to FRONT L-CH and R-CH by g a virtual Center CH.(Default setting is SMALL).
ER SETUP ---Available only in DVD.

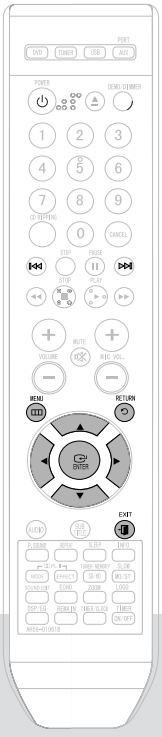

# Setting the Test Tone

ENG

Press the Test Tone to check the speaker connections and to adjust the speaker levels.

**1** In Stop mode, press **MENU** button.

**2** Press Cursor ▼ button to move to 'Audio' and then press **ENTER** button.

**3** Press Cursor ▼ button to move to 'TEST TONE' and then press **ENTER** button.

- The test tone will be sent to L → C → R → SR → SL → SW in that order. If the ENTER button is pressed again at this time, the test tone will stop.

**Note**

- The test tone functin is not available while HDMI AUDIO ON.

SETUP

Press **RETURN** button to return to the previous level.

Press **MENU/EXIT** button to exit the setup screen.



Downloaded From Disc-Player.com Samsung Manuals

# ne Delay Time



d at equal distances from the listening position, you can adjust the from the rear speakers.

In Stop mode, press **MENU** button.

**2** Press Cursor ▼ button to move to 'Audio' and then press **ENTER** button.

**3** Press Cursor ▼ button to move to 'DELAY TIME' and then press **ENTER** button.

**4** Press Cursor ▲, ▼, ◄, ► buttons to move to the desired speaker and then press **ENTER** button.

**5** Press Cursor ◄, ► to set the Delay time.

- You can set the delay time for C between 00 and 05mSEC and for LS and RS between 00 and 15mSEC.

## ting up the Speaker Delay Time

n 5.1CH Surround Sound is played, you can enjoy the best sound if stance between you and each speaker is the same. Since the sounds e at the listening position at different times depending on the ment of speakers, you can adjust this difference by adding a delay t to the sound of the Surround Speakers.

**ote**

h AC-3 and DTS, the delay time can be set between 00 and 15mSEC.

Center Speaker setting is not available for no center speaker.

- **Setting CENTER SPEAKER**

If the distance of Dc is equal to or longer than the distance of Df in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.

| Distance between Df and Dc | Delay Time |
|---|---|
| 0.00 m | 0 ms |
| 0.34 m | 1 ms |
| 0.68 m | 2 ms |
| 1.02 m | 3 ms |
| 1.36 m | 4 ms |
| 1.70 m | 5 ms |

- **Setting REAR () SPEAKERS**

If the distance of Df is equal to the distance of Ds in the figure, set the mode as 0ms. Otherwise, change the setting according to the table.

| Distance between Df and Ds | Delay Time |
|---|---|
| 0.00 m | 0 ms |
| 1.02 m | 3 ms |
| 2.04 m | 6 ms |
| 3.06 m | 9 ms |
| 4.08 m | 12 ms |
| 5.10 m | 15 ms |

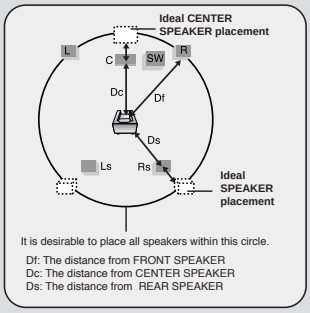


It is desirable to place all speakers within this circle.

Df: The distance from FRONT SPEAKER
Dc: The distance from CENTER SPEAKER
Ds: The distance from REAR SPEAKER



Downloaded From Disc-Player.com Samsung Manuals

# e Audio Quality

and level for each speaker.

## When adjusting the audio quality using the setup screen

Stop mode,
ss **MENU**
tton.

**2** Press Cursor ▼ button to move to 'Audio' and then press **ENTER** button.

ss Cursor ▼ button
ove to 'SOUND
T' and then press
**ER** button.

**4** Press Cursor ▲, ▼, ◄, ► buttons to select the desired item and then press **ENTER** button.

**TURN** button to return to the previous level.

**ENU/EXIT** button to exit the setup screen.

ENG

SETUP

## Method 2 When manually adjusting with the SOUND EDIT button

### Adjusting Front Speaker Balance

**1** Press **SOUND EDIT** button and then press Cursor ◄, ►.

### Adjusting Rear Speaker Balance

**2** Press **SOUND EDIT** button and then press Cursor ◄, ►.

### Adjusting Center Speaker Level

**3** Press **SOUND EDIT** button and then press Cursor ◄, ►.

### Adjusting Rear Speaker Level

**4** Press **SOUND EDIT** button and then press Cursor ◄, ►.

### Adjusting Subwoofer Speaker Level

**5** Press **SOUND EDIT** button and then press Cursor ◄, ►.

**Note**

**Adjusting Front/Rear Speaker Balance**
- You can select between 00 and –06 and OFF.
- The volume decreases as you move closer to –6.

**Adjusting Center/Rear/Subwoofer Speaker Level**
- The volume level can be adjusted in steps from +6dB to –6dB.
- The sound gets louder as you move closer to +6dB and quieter as you get closer to -6dB.



Downloaded From Disc-Player.com Samsung Manuals

# RC (Dynamic Range Compression)

enjoy Dolby Digital sound when watching movies at

ss **MENU** button.

f "**DRC**" is selected, press **ENTER**.

**2** Press Cursor ▼ button to move to 'Audio' and then press **ENTER** button.

**4** Press Cursor ▲, ▼ to adjust the 'DRC'.

- The more times the Cursor ▲ button is pressed, the greater the effect, and the more times Cursor ▼ button is pressed, the smaller the effect.

**RETURN** button to return to the previous level.

s **MENU/EXIT** button to exit the setup screen.

# AV SYNC Setup

Video may look slower than the audio if it is connected with digital TV.
In this case, adjust the delay time of audio to optimal status to fit the video.

**1** Press the **MENU** button.

- Setup menu appears.

**2** Press Cursor ▲, ▼ buttons to move to 'Audio' and then press **ENTER** button.

- 'Audio' menu appears.

**3** Press Cursor ▲, ▼ buttons to move to 'AV-SYNC' and then press **ENTER** button.

- AV-SYNC screen appears.

**4** Press Cursor ▲, ▼ buttons to select the Delay Time of AV-SYNC and then press the **ENTER** button.

- You can set the audio delay time between 0 ms and 300 ms. Set it to the optimal status.

Press **RETURN** button to return to the previous level.

Press **MENU/EXIT** button to exit the setup screen.

ENG

SETUP



Downloaded From Disc-Player.com Samsung Manuals

# ro Logic II Mode

*olby Pro Logic II audio mode.*

**II MODE** button.

d, the mode changes as follows.

→ PRO LOGIC → MATRIX

ic, you can experience sound effects as if you tual performance.
movie soundtrack.
nce a realistic multi-channel effect, as if using hile using just the front left and right

annel surround sound.
to sound from the front left and right speakers only.

mode, connect your external device to the

u connect to only one of the inputs (L or R), d sound.

# Dolby Pro Logic II Effect

ENG

*This function works only in Dolby Pro Logic MUSIC mode.*

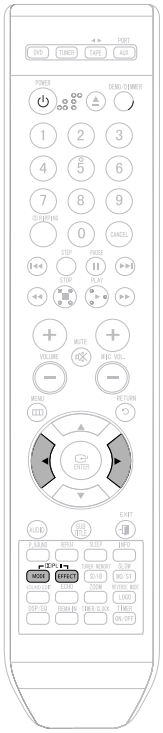

**1** Press the **PL II MODE** button to select **<MUSIC>** mode.

**2** Press the **PL II EFFECT** button to select <**PANORAMA**>, then press the Cursor ◀ , ▶ buttons to select the desired effect setting.
- You can select either 0 or 1.
- This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging.

**3** Press the **PL II EFFECT** button to select <**C-WIDTH**>, then press the Cursor ◀ , ▶ button to select the desired effect setting.
- You can select between 0 and 7.
- This sets the width of the center image. The higher the setting, the less sound comes from the center speaker.

**4** Press the **PL II EFFECT** button to select <**DIMENSION**>, then press the Cursor ◀ , ▶ button to select the desired setting
- You can select between 0 and 6.
- Incrementally adjusts the sound field (DSP) from the front or rear.

SETUP

• When playing a DVD disc encoded with two or more channels, multi-channel mode will be selected automatically and the PL II (Dolby Pro Logic II) button does not work.



Downloaded From Disc-Player.com Samsung Manuals

# g to Radio

M band.

on to select **<PRESET>** and then press

on to select **<AUTO>** and then press
band.
select **<MANUAL>** and then briefly press
er frequency.

no/Stereo.
tches between **<STEREO>** and **<MONO>**.
ear, interference-free broadcast.

# Presetting Stations

**You can store up to:**

♦ 15 FM stations

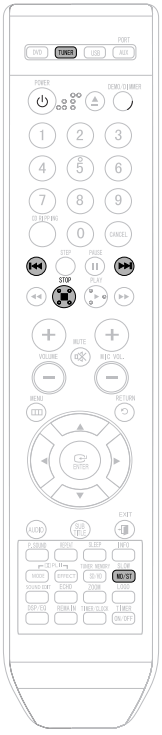

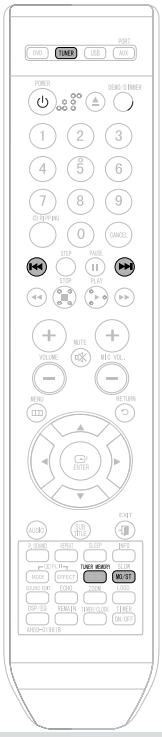

Example : Presetting FM 89.10 in the memory

**1** Press the **TUNER** button to select the FM band.

**2** Press the ⏮ ⏭ button to select <89.10>.

**3** Press the **TUNER MEMORY** button.

**4** Press the ⏮ ⏭ button to select preset number.

- You can select between 1 and 15 presets.

**5** Press the **TUNER MEMORY** button again.

- The station is stored in memory.

**6** To preset another station, repeat steps 2 to 5.

➢ To tune in to a preset station, press the ⏮ ⏭ button on the remote control to select a channel.

• This unit does not receive AM broadcasts.

ENG

RADIO OPERATION



Downloaded From Disc-Player.com Samsung Manuals

# nction

the system on or off at specific times.
n to be switched on or off automatically, you must cancel the timer.
hat the current time is correct.
seconds to set the required options.
st start again.

morning.

Press **TIMER/CLOCK** until **TIMER** is displayed.

**3** Press the **ENTER** button.

- **ON TIME** is displayed (instead of the equalizer symbols) for a few seconds, followed by any switch-on time already set; you can set the timer switch-on time.

Set the timer switch-off time.

**6** Press ◀ or ▶ button to adjust the volume level and press **ENTER**.

- The source to be selected is displayed.

the hour by pressing ◀ or ▶
on.
ss **ENTER**.
he minutes flash.
the minutes by pressing ◀ or ▶
on.
ss **ENTER**.
**OL 10** is displayed, where 10 orresponds to the volume ready set.

Press **ENTER** to confirm the timer.

**9** Press **POWER** to set the system to standby mode.

- ◷ is displayed to the top right of the time, indicating that the timer has been set.
- The system will switch on and off automatically at the required times.

on and off times are identical, the word **ERROR** is displayed.
Multi Jog or ⏮ ⏭ button on the front panel to instead ◀, ▶ button on the tep 4,5,6,7.

# Canceling the Timer

ENG

After having set the timer, it will start automatically as shown by the TIMER indication on the display. If you no longer wish to use the timer, you must cancel it.

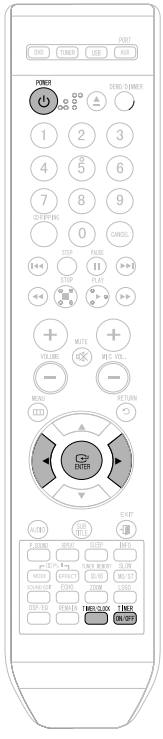

To cancel the timer, press **TIMER ON/OFF** once.

- ◷ is no longer displayed.

To resume the timer, press **TIMER ON/OFF** again.

- ◷ is displayed again.

**Note**

- You can cancel the timer while the power is on or while the player is in standby.

MISCELLANEOUS



Downloaded From Disc-Player.com Samsung Manuals

# OUND / DSP/EQ

the function of Power Sound.
s and improves high key or bass twice as much for you to appreciate

utton

a few seconds.
**UND** again, "**PASS**"
P.SOUND

can't work and the
mode .

emote control until the required option is selected.

uipped with a preset equalizer that allows you to choose the most
ble and bass frequencies, according to the type of music you are

**Select...**
- PASS
- POPS
- JAZZ
- ROCK
- STUDIO
- CLUB
- HALL
- MOVIE
- CHURCH

an't work and the
" mode.

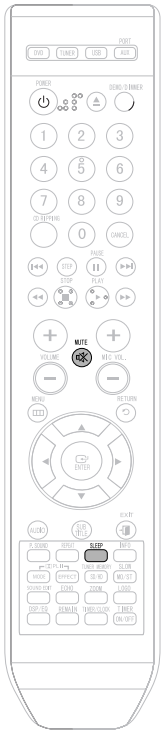

# Sleep Timer Function / Mute Function

ENG

## Sleep Timer Function

You can set the time that the DVD player will shut itself off.

Press **SLEEP** button.

- Each time the button is pressed, the selection changes as follows:
  **90 MIN → 60 MIN → 45 MIN → 30 MIN → 15 MIN → OFF.**

To confirm the sleep timer setting, press **SLEEP** button.

- The remaining time before the DVD player will shut itself off is displayed.
- Pressing the button again changes the sleep time from what you have set earlier.

To cancel the sleep timer, press **SLEEP** button until OFF appears on the display.

## Mute Function

This is useful when answering a doorbell or telephone call.

Press **MUTE** button.

- '**MUTE**' appears in the display.
- To turn off mute, press the button again.

MISCELLANEOUS



Downloaded From Disc-Player.com Samsung Manuals

ction / DIMMER Function/
ion

on
vailable on

utton.

l in turn on the

l in this booklet.
er to the

ion
lay on the main
iewing.

tton.

ss changes as
R

ss

ion

otion while the unit is turned

while the unit is turned off (on standby),The
emonstration) disappears.

monstration is canceled temporarily.

# CD RIPPING Function

ENG

**You can rip a compact disc as a MP3 file on the USB**
**This feature enables you to ripping with the start of the disc or track of your choice.**

**1** Switch the system on by pressing **STANDBY/ON**.

**2** Connect the USB.

**3** Load a compact disc(Digital Audio).

- Press the **OPEN/CLOSE** button to open the disc tray.
- Insert a CD and press the **OPEN/CLOSE** button to close the disc tray.
- Use the CD selection ( ⏮/⏭ ) buttons to select the desired song.

**4** Press CD RIPPING button on remote control to starting ripping.

- If the system is either at pause or playing state,turn the CD RIPPING dial down or press CD RIPPING button on the remote control to start the ripping for the current track.
- Turn CD RIPPING dial up or press and hold CD RIPPING button on the remote control to start ripping the all tracks of Disc.
- "CD Ripping" is displayed in red and CD RIPPING starts.
- During CD ripping, do not disconnect USB device.

**5** To stop ripping, press STOP ■ button.and then automatically create and save as the MP3 file.

After CD-Ripping,a directory named "RIPPING" will be created in your device.The file name follows the format:"SAM-XXXX".MP3.

**Note**

- Don't disconnected USB and AC Cord during CD-Ripping.This may cause the file damage.If you want to stop CD-Ripping during CD-Ripping,you must press stop Key first and after the CD Stopped,then you can remove the USB device.
- If you disconnected USB device when CD Ripping,the main unit will be power off and you may not delete the ripped file,In this case, please connect the USB on the PC and backup the USB data on the PC first and then formate the USB device .
- On the CD playing ,connect the USB,the CD play will be paused and will resume playing till the USB intitilization finished.
- According the different USB the initilization time maybe different.
- When the USB memory is not enough,it will be displayed "NOT ENOUGH MEMORY"
- DTS-CD can't for CD Ripping.
- Starting CD ripping within 5 seconds can't create the CD Ripping file.
- Ripping file is only created when CD Ripping is stopped afters 5 seconds (ex. SAM-0001.MP3).
- With external HDD,FAT format the USB can be CD Ripping,but not NTFS.The CD Ripping function of this product does not support all USB devices.
- When you use CD high speed search function,the CD Ripping can't work.
- When CD Ripping, CD audio can't be out.
- During CD Ripping,do not deal impact.If is shocked while CD Ripping,CD Ripping maybe disengage.
- Sometimes, some of USB devices, CD Ripping time is long.
- If you use scratched disc for CD Ripping, or connect/disconnect HDMI cable during CD Ripping, there might be some noise and broken sound on ripped file.
- When HDMI audio on, the CD RIPPING can't work.

## CD Ripping Feature Supported Player

| Product | Company | Type |
|---|---|---|
| YP-T8 | Samsung | MP3 Player |
| YP-T7F | Samsung | MP3 Player |
| YP-D1 | Samsung | MP3 Player |
| YP-T8N | Samsung | MP3 Player |
| YP-U2 | Samsung | MP3 Player |
| YP-T9 | Samsung | MP3 Player |
| YP-K5 | Samsung | MP3 Player |
| YP-K3 | Samsung | MP3 Player |
| YV-150 | Samsung | MP3 Player |
| YP-U3 | Samsung | MP3 Player |

MISCELLANEOUS



Downloaded From Disc-Player.com Samsung Manuals

# eadphones/Microphone

hones to your micro component system so that you
rammers without disturbing other people in the room.
p jack or an appropriate adapter.

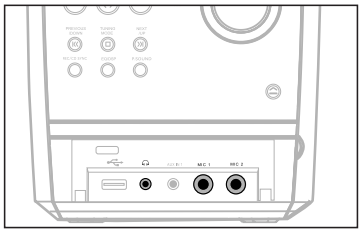

Connect the headphones to the **PHONES** jack on the front panel.

- The loudspeakers are no longer used to output the sound.

**Note**

- Prolonged use of headphones at a high volume may damage your hearing.
- HDMI AUDIO ON is converted to OFF when connected the headphones.
- When CD ripping,CD Audio can't be out.

Plug the microphone with a 6.3ø MIC jack into microphone terminal.

- Connect the Microphone.
- Press the **MIC VOL** buttons to adjust the **MIC** level.
- Press the **ECHO** button to select ECHO1,ECHO2, and ECHO OFF.
- When connected a MIC,HDMI output is not available.

# Cautions on Handling and Storing Discs

ENG

Small scratches on the disc may reduce sound and picture quality or cause breaks in playback. Be especially careful not to scratch discs when handling them.

## Handling discs

**Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface.**
**Do not stick paper or tape on the disc.**

## Handling and Storing Discs

**When you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.**

- When cleaning, wipe gently from the inside to the outside of the disc.

**Note**

- Condensation may form if warm air comes into contact with cold parts inside the player. When condensation forms inside the player, the player may not operate correctly. If this occurs, remove the disc and let the player stand for 1 or 2 hours with the power on.





Downloaded From Disc-Player.com Samsung Manuals

# lling for Service

unit does not function properly. If the problem you are experiencing is not low does not help, turn off the unit, disconnect the power cord, and contact amsung Electronics Service Center.

| Check/Remedy |
|---|
| Is the power cord plugged securely into the outlet?<br>Turn off the power and then turn it back on. |
| Check the region number of the DVD.<br>DVD discs purchased from abroad may not be playable.<br>CD-ROMs and DVD-ROMs cannot be played on this DVD player.<br>Make sure that the rating level is correct. |
| Is the remote control being operated within its operation range of angle and distance?<br>Are the batteries exhausted? |
| Are you using a deformed disc or a disc with scratches on the surface?<br>Wipe the disc clean. |
| No sound is heard during fast playback, slow playback, and step motion playback.<br>Are the speakers connected properly? Is the speaker setup correctly customized?<br>Is the disc severely damaged? |
| Was the DVD player suddenly moved from a cold place to a warm one? When condensation forms inside the player, remove the disc and let the player stand for 1 or 2 hours with the power on. (You can use the player again after condensation disappears.) |
| Is the TV power on?<br>Are the video cables connected properly?<br>Is the disc dirty or damaged?<br>A poorly manufactured disc may not be playable. |

| Symptom | Check/Remedy |
|---|---|
| **Audio language and subtitles do not work.** | • Audio language and subtitles will not work for DVDs not containing them. And depending on the disc, they may work differently. |
| **Menu screen does not appear even when the menu function is selected.** | • Are you using a disc that does not contain menus? |
| **Aspect ratio cannot be changed.** | • You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function. |
| **Can't receive radio broadcast.** | • Is the antenna connected properly?<br>• If the antenna's input signal is weak, install an external FM antenna in an area with good reception. |
| • **The main unit is not working.** (Example: The power goes out or strange noise is heard.)<br>• **The DVD player is not working normally.** | • Turn off the power and hold the **STOP** button on the main unit for longer than 5 seconds.<br>Using the RESET function will erase all stored settings.<br>Do not use this unless necessary. |
| **The password for rating level has been forgotten.** | • While the player is in **"NO DISC"** mode, hold the main unit's **STOP** ¤ button for longer than 5 seconds. "INITIAL" appears on the display and all settings will return to the default values.<br>• Press the POWER button.<br>**Using the RESET function will erase all stored settings.**<br>**Do not use this unless necessary.** |







Downloaded From Disc-Player.com Samsung Manuals

# tions

| | |
|---|---|
| umption | 100 W |
| | 4.8 Kg |
| W x H x D) | 180 x 390 x 350 mm |
| mperature Range | +5 °C~+35 °C |
| midity Range | 10 % ~ 75 % |
| tivity | 10 dB |
| | 60 dB |
| | 0.5 % |
| deo | 1.0 Vp-p(75 Ω load) |
| ideo | Y:1.0 Vp-p(75 Ω load) |
| | Pr:0.70 Vp-p(75 Ω load) |
| | Pb:0.70 Vp-p(75 Ω load) |
| | Impedance: 85~115 Ω |
| r output | 135 W x 2(3 Ω) |
| utput | 135 W(3 Ω) |
| output | 135 W x 2(3 Ω) |
| eaker output | 180 W(3 Ω) |
| nge | 20 Hz~20 KHz |
| | 70 dB |
| aration | 50 dB |
| ty | (AUX)500 mV |

| | 5.1ch speaker system | | |
|---|---|---|---|
| | Front/Center/Rear speaker | | Subwoofer speaker |
| | 3 Ω | | 3 Ω |
| | 140 Hz~20 kHz | | 35 Hz~160 Hz |
| level | 88 dB | | 90 dB |
| | 135 W | | 180 W |
| | 270 W | | 360 W |
| x D) | Front/Rear | 167 x 387 x 235 mm | 170 x 387 x 328 mm |
| | Center | 255 x 111 x149 mm | |
| | Front/Rear | Front:4.0 Kg, Rear:3.6 Kg | 4.5 Kg |
| | Center | 1.8 Kg | |

# USB Host Feature Supported Products

ENG

## DIGITAL CAMERA

| Product | Company | Type | Product | Company | Type |
|---|---|---|---|---|---|
| Finepix-A340 | Fuji | Digital Camera | U300 | Olympus | Digital Camera |
| Finepix-F810 | Fuji | Digital Camera | X-350 | Olympus | Digital Camera |
| Finepix-F610 | Fuji | Digital Camera | C-760 | Olympus | Digital Camera |
| Finepix-f450 | Fuji | Digital Camera | C-5060 | Olympus | Digital Camera |
| Finepix S7000 | Fuji | Digital Camera | X1 | Olympus | Digital Camera |
| Finepix A310 | Fuji | Digital Camera | U-mini | Olympus | Digital Camera |
| KD-310Z | Konica | Digital Camera | Lumix-FZ20 | Panasonic | Digital Camera |
| Finecam SL300R | Kyocera | Digital Camera | DMC-FX7GD | Panasonic | Digital Camera |
| Finecam SL400R | Kyocera | Digital Camera | Lumix LC33 | Panasonic | Digital Camera |
| Finecam S5R | Kyocera | Digital Camera | LUMIX DMC-F1 | Panasonic | Digital Camera |
| Finecam Xt | Kyocera | Digital Camera | Optio-S40 | Pentax | Digital Camera |
| Dimage-Z1 | Minolta | Digital Camera | Optio-S50 | Pentax | Digital Camera |
| Dimage Z1 | Minolta | Digital Camera | Optio 33LF | Pentax | Digital Camera |
| Dimage X21 | Minolta | Digital Camera | Optio MX | Pentax | Digital Camera |
| Coolpix4200 | Nikon | Digital Camera | Digimax-420 | Samsung | Digital Camera |
| Coolpix4300 | Nikon | Digital Camera | Digimax-400 | Samsung | Digital Camera |
| Coolpix 2200 | Nikon | Digital Camera | Sora PDR-T30 | Toshiba | Digital Camera |
| Coolpix 3500 | Nikon | Digital Camera | Coolpix 5900 | Nikon | Digital Camera |
| Coolpix 3700 | Nikon | Digital Camera | Coolpix S1 | Nikon | Digital Camera |
| Coolpix 4100 | Nikon | Digital Camera | Coolpix 7600 | Nikon | Digital Camera |
| Coolpix 5200 | Nikon | Digital Camera | DMC-FX7 | Panasonic | Digital Camera |
| Stylus 410 digital | Olympus | Digital Camera | Dimage Xt | Minolta | Digital Camera |
| 300-digital | Olympus | Digital Camera | AZ-1 | Olympus | Digital Camera |
| 300-digital | Olympus | Digital Camera | | | Digital Camera |

## USB FLASH DISC

| Product | Company | Type | Product | Company | Type |
|---|---|---|---|---|---|
| Cruzer Micro | Sandisk | USB 2.0 USB Flash Drive 128M | XTICK | LG | USB 2.0 128M |
| Cruzer Mini | Sandisk | USB 2.0 128M | Micro Mini | Iomega | USB 2.0 128M |
| Cruzer Mini | Sandisk | USB 2.0 256M | iFlash | Imation | USB 2.0 64M |
| SONY Micro Vault | Sony | USB 2.0 64MB | LG | XTICK(M) | USB 2.0 64M |
| FLEX DRIVE | Serotech | USB 2.0 32MB | RiDATA | EZDrive | USB 2.0 64M |
| AnyDrive | A.L tech | USB 2.0 128MB | | | |

## MP3 PLAYER

| Product | Company | Type | Product | Company | Type |
|---|---|---|---|---|---|
| Creative MuVo NX128M | Creative | 128 MB MP3 Player | YP-780 | Samsung | MP3 Player |
| Iriver H320 | Iriver | 20G HDD MP3 Player | YP-35 | Samsung | MP3 Player |
| YH-920 | Samsung | 20G HDD MP3 Player | YP-55 | Samsung | MP3 Player |
| YP-T7 | Samsung | MP3 Player | iAUDIO U2 | Cowon | MP3 Player |
| YP-MT6 | Samsung | MP3 Player | iAUDIO G3 | Cowon | MP3 Player |
| YP-T6 | Samsung | MP3 Player | iAudio M3 | Cowon | HDD MP3 Player |
| YP-53 | Samsung | MP3 Player | SI-M500L | Sharp | 256MB MP3 Player |
| YP-ST5 | Samsung | MP3 Player | H10 | Iriver | MP3 Player |
| YP-T5 | Samsung | MP3 Player | YP-T5 VB | Samsung | MP3 Player |
| YP-60 | Samsung | MP3 Player | YP-53 | Samsung | 256MB MP3 Player |

MISCELLANEOUS



Downloaded From Disc-Player.com Samsung Manuals

# n Terminology

o some DVD discs are scenes which have been simultaneously shot
r of different angles (the same scene is shot from the front, from the
right , etc.).
cs, the Angle button can be used to change the angle of view for
es.

rs are recorded on DVD discs. A Title is subdivided into many
n of which is numbered, and specific parts of the video can be
kly using these numbers.

y optical disc on which high-quality pictures and sound have been
neans of digital signals. Incorporating a new video compression
PEG-2) and high-density recording technology, a DVD disc
o 0.6 mm thick discs bonded together.

player and DVD discs are encoded with a region number.
umber on the DVD disc does not correspond to the region number
ayer, the player cannot play the disc.

pearing at the bottom of the screen. A DVD disc can contain up to
guages.

rs are recorded on DVD discs. When a disc contains two or more
movies are numbered as Title 1, Title 2, etc.

rs are assigned to the tracks which are recorded on video and
ney enable specific tracks to be located quickly.

nnel Digital Surround sound reproduced from DVDs and LDs
digital signals (with DOLBY DIGITAL disc marking). With better sound quality,
e, and directionality than traditional Dolby surround technology, you
amic, realistic sound.

## Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

ENG

| Region | Country | Customer Care Center ☎ | Web Site |
|---|---|---|---|
| North America | CANADA | 1-800-SAMSUNG(726-7864) | www.samsung.com/ca |
| | MEXICO | 01-800-SAMSUNG(726-7864) | www.samsung.com |
| | U.S.A | 1-800-SAMSUNG(726-7864) | www.samsung.com |
| Latin America | ARGENTINE | 0800-333-3733 | www.samsung.com/ar |
| | BRAZIL | 0800-124-421 , 4004-0000 | www.samsung.com |
| | CHILE | 800-SAMSUNG(726-7864) | www.samsung.com/cl |
| | NICARAGUA | 00-1800-5077267 | |
| | HONDURAS | 800-7919267 | |
| | COSTA RICA | 0-800-507-7267 | www.samsung.com/latin |
| | ECUADOR | 1-800-10-7267 | www.samsung.com/latin |
| | EL SALVADOR | 800-6225 | www.samsung.com/latin |
| | GUATEMALA | 1-800-299-0013 | www.samsung.com/latin |
| | JAMAICA | 1-800-234-7267 | www.samsung.com/latin |
| | PANAMA | 800-7267 | www.samsung.com/latin |
| | PUERTO RIICO | 1-800-682-3180 | www.samsung.com/latin |
| | REP. DOMINICA | 1-800-751-2676 | www.samsung.com/latin |
| | TRINIDAD & TOBAGO | 1-800-SAMSUNG(726-7864) | www.samsung.com/latin |
| | VENEZUELA | 0-800-100-5303 | www.samsung.com/latin |
| | COLOMBIA | 01-8000112112 | www.samsung.com.co |
| Europe | BELGIUM | 0032 (0)2 201 24 18 | www.samsung.com/be |
| | CZECH REPUBLIC | 844 000 844<br>Distributor pro Českou republiku:<br>Samsung Zrt., česka organizační složka<br>Vyskočilova 4, 14000 Praha 4 | www.samsung.com/cz |
| | DENMARK | 70 70 19 70 | www.samsung.com/dk |
| | FINLAND | 030-6227 515 | www.samsung.com/fi |
| | FRANCE | 3260 SAMSUNG (€ 0,15/Min),<br>08 25 08 65 65 (€ 0,15/Min) | www.samsung.com |
| | GERMANY | 01805 - SAMSUNG(726-7864) (€ 0,14/Min) | www.samsung.com |
| | HUNGARY | 06-80-SAMSUNG(726-7864) | www.samsung.com |
| | ITALIA | 800-SAMSUNG(726-7864) | www.samsung.com |
| | LUXEMBURG | 0035 (0)2 261 03 710 | www.samsung.com/be |
| | NETHERLANDS | 0900-SAMSUNG(726-7864) (€ 0,10/Min) | www.samsung.com/nl |
| | NORWAY | 815-56 480 | www.samsung.com/no |
| | POLAND | 0 801 801 881 , 022-607-93-33 | www.samsung.com/pl |
| | PORTUGAL | 80820-SAMSUNG(726-7864) | www.samsung.com/pt |
| | SLOVAKIA | 0800-SAMSUNG(726-7864) | www.samsung.com/sk |
| | SPAIN | 902 10 11 30 | www.samsung.com |
| | SWEDEN | 0771-400 200 | www.samsung.com/se |
| | U.K | 0845 SAMSUNG (7267864) | www.samsung.com |
| | EIRE | 0818 717 100 | www.samsung.com/ie |
| | AUSTRIA | 0800-SAMSUNG(726-7864) | www.samsung.com/at |
| | SWITZERLAND | 0800-SAMSUNG(726-7864) | www.samsung.com/ch |
| CIS | RUSSIA | 8-800-555-55-55 | www.samsung.com |
| | KAZAHSTAN | 8-10-800-500-55-500 | www.samsung.kz |
| | UZBEKISTAN | 8-10-800-500-55-500 | www.samsung.uz |
| | KYRGYZSTAN | 00-800-500-55-500 | |
| | TADJIKISTAN | 8-10-800-500-55-500 | |
| | UKRAINE | 8-800-502-0000 | www.samsung.com |
| | LITHUANIA | 8-800-77777 | www.samsung.lt |
| | LATVIA | 800-7267 | www.samsung.com/lv |
| | ESTONIA | 800-7267 | www.samsung.ee |
| Asia Pacific | AUSTRALIA | 1300 362 603 | www.samsung.com |
| | NEW ZEALAND | 0800SAMSUNG(726-7864) | www.samsung.com/nz |
| | CHINA | 800-810-5858 , 010-6475 1880 | www.samsung.com |
| | HONG KONG | 3698-4698 | www.samsung.com/hk |
| | INDIA | 3030 8282 , 1800 110011 | www.samsung.com |
| | INDONESIA | 0800-112-8888 | www.samsung.com |
| | JAPAN | 0120-327-527 | www.samsung.com/jp |
| | MALAYSIA | 1800-88-9999 | www.samsung.com/my |
| | PHILIPPINES | 1800-10-SAMSUNG(726-7864) | www.samsung.com/ph |
| | SINGAPORE | 1800-SAMSUNG(726-7864) | www.samsung.com |
| | THAILAND | 1800-29-3232 , 02-689-3232 | www.samsung.com |
| | TAIWAN | 0800-329-999 | www.samsung.com/tw |
| | VIETNAM | 1 800 588 889 | www.samsung.com |
| Middle East & Africa | TURKEY | 444 77 11 | www.samsung.com |
| | SOUTH AFRICA | 0860-SAMSUNG(726-7864 ) | www.samsung.com |
| | U.A.E | 800-SAMSUNG (726-7864), 8000-4726 | www.samsung.com |

MISCELLANEOUS

Downloaded From Disc-Player.com Samsung Manuals